

ResinMold® Install Notes ... The solution to Trim Arches and Curves



1) Open the ResinMold®

Lay it out and allow it to warm up if cold. If made to a radius arch, it will form to the radius as the material has memory. Check the measurements as per your order.



2) Pre-Finishing

Do not prefinish the material prior to installation. The material may flex during installation and cause fractures in the finish.

3) Substrata Surface or Base

Since the material is flexible it will take the form of the base. If there are concave or convex bows in the base the material will follow these imperfections. Thus, the surfaces should be plum, clean, and even.

4) PreDetermine Placement or Layout

For angles, you can cut the material with any type of saw. Hold material firmly to table or fence when cutting.



5) Apply Adhesive

Use approved adhesive on back surface area.



6) Brad Nailer (do not use screws or nails)

When using a brad nailer try to affix them to indents or use the side of the moulding. They will sink into the material but may leave a small indentation which can be easy filled later.



Caution:

Use a probe for any hidden electrical wires or water pipes inside the wall before brad nailing.


7) Allow to Dry then Paint

Once dried apply polyspaxing compound for gaps between the wall and the moulding or joins between pieces. The material is primed ready for paint or stain.



8) Paint or Stain

Once dried faux finish or paint

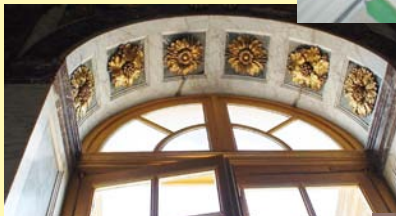

These notes are suggestions only - consult with a professional for installations of complex situations.



Imperial Productions®

1-800-399-7585

Imperial Productions & Distribution Inc Toronto / New York

email sales@imperialproductions.com copyright 2016 MRDCI All Rights Reserved

Nov 2018